


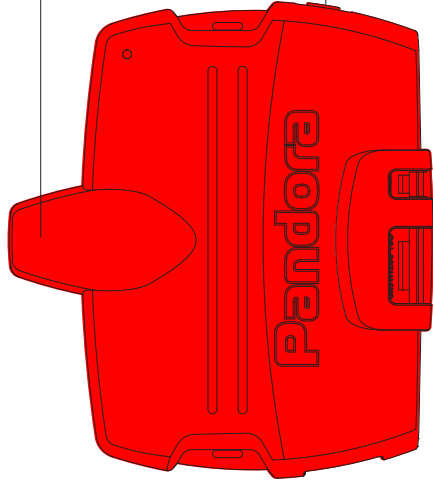


WARNING!
Do not accidentally shield the antenna!

VALET BUTTON




X-2 micro-USB




X-3 Temperature sensor

X-7 VALET button

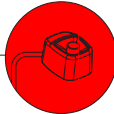

VALET BUTTON

X-6 LED indicator

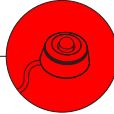

LED INDICATOR


X-5 Relay module

1	Blue	(-)	OUT-7 • ENGINE BLOCK
2	Orange	(-)	OUT-6 • ACCESSORIES
3	Brown	(-)	OUT-9 • IGNITION
4	Green	(-)	OUT-8 • KEYLESS BYPASS
5	Yellow	(-)	OUT-10 • STARTER
6	Red	+ 12V	POWER +12V

X-4 Main socket

1	White	3..100V min 8Hz	TACHOMETER
2	Red/Black	(-) 200mA	OUT-5 • OPEN TRUNK
3	Orange/White		CAN-HIGH
4	Yellow/White	(-) 200mA	OUT-4 • OPEN DOORS
5	Grey	(-)	INP-2 • DOOR TRIGGERS
6	Green	(-) 200mA	OUT-3 • TURN SIGNALS
7	White/Blue	(+)	INP-5 • BRAKES
8	Black	(-)	GROUND
9	Blue	(-)	INP-4 • HANDBRAKE/NEUTRAL
10	Brown/White	(-)	INP-3/IMO** • HOOD PIN
11	Orange/Black		CAN-LOW
12	Yellow/Black	(-) 200mA	OUT-2 • LOCK DOORS
13	Blue/Black	(-) 200mA	OUT-1/INP-1/IMI** • TRUNK TRIGGER
14	Yellow	(+)	INP-6 • IGNITION SWITCH
15	Purple	(+) 2A	OUT-11 • SIREN
16	Red	(+) Fuse 3A	POWER +12V

Pandora LIGHT

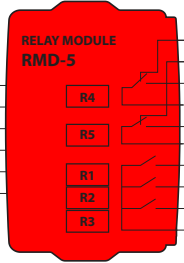

Blue/Black
Green/Black
Blue
Blue/Red
Green/Red
Green
Orange
Brown
Yellow
Red

Fuse 40A


WARNING!!!
Total current relay R1 + R2 + R3 should not exceed 40A!

WARNING!!!
For proper installation a connected laptop with AlarmStudio software is required. Switch the system to programming mode (see page 30) and select your car model in AlarmStudio for detailed installation instructions. AlarmStudio can be downloaded from pandorainfo.com

* See 'System set' on page 4
** Connect when keyless start function in Toyota, Lexus is enabled

X-1 Engine Preheater

1	White	LIN IN
2	Black	LIN OUT

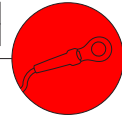

TEMPERATURE SENSOR DS-1820*