


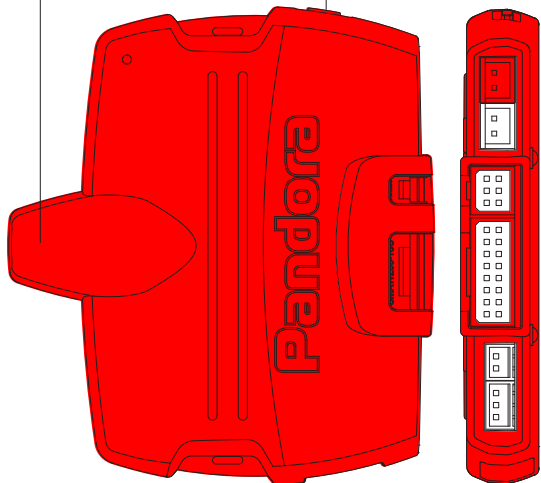

WARNING!
Do not accidentally shield the antenna!

VALET BUTTON



X-2 micro-USB

X-7 Keyless bypass

1	Green	IMMO-KEY1
2	White	
3	Black	IMMO-KEY2

X-6 LED indikátor



X-5 Relé modul


1	Blue	(-) OUT-7 • ENGINE BLOCK
2	Orange	(-) OUT-6 • ACCESSORIES
3	Brown	(-) OUT-9 • IGNITION
4	Green	(-) OUT-8 • KEYLESS BYPASS
5	Yellow	(-) OUT-10 • STARTER
6	Red	+ 12V POWER +12V

X-4 Hlavní kon.

1	White	3...100V min 8Hz TACHOMETER
2	Red/Black	(-) 200mA OUT-5/INP-7 • OPEN TRUNK
3	Orange/White	CAN1-HIGH
4	Yellow/White	(-) 150mA CAN2-HIGH • OPEN DOORS
5	Grey	(-) INP-2 • DOOR TRIGGERS
6	Green	(-) 200mA OUT-3 • TO TURN SIGNALS
7	Blue/White	(+) INP-5 • BRAKES/FUEL CONTROL
8	Black	(-) GROUND
9	Blue	(-) INP-4 • HANDBRAKE/NEUTRAL
10	Brown/White	(-) INP-3 • HOOD PIN
11	Orange/Black	CAN1-LOW
12	Yellow/Black	(-) 150mA CAN2-LOW • LOCK DOORS
13	Blue/Black	(-) 200mA OUT-1/INP-1 • TRUNK TRIGGER
14	Yellow	(+) INP-6 • TO IGNITION SWITCH
15	Purple	(+) 2A OUT-11 • SIREN
16	Red	(+) Fuse 3A POWER +12V

X-3 Teplotní senzor

Pandora LIGHT+

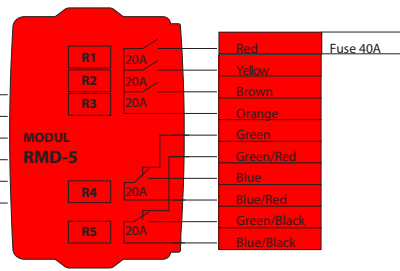


WARNING!!!
Total current relay R1 + R2 + R3 should not exceed 40A!

WARNING!!!
For proper installation a connected laptop with AlarmStudio software is required. Switch the system to programming mode (see page 39) and select your car model in AlarmStudio for detailed installation instructions. AlarmStudio can be downloaded from pandorainfo.eu.

* See 'System set' on page 5

X-1 Nezávislé topení

1	White	LIN OUT
2	Black	LIN IN

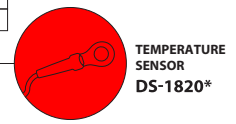

TEMPERATURE SENSOR DS-1820*